Mounting und Operating Instructions External Supply Unit Notice







Technical specifications

Casing/colour	Polycarbonate/grey
Dimensions (WxHxD)	254 x 90 x 180 mm
Protection class	IP65
Safety class	
Connecting cable	max. of 20 m between supply unit and luminaire
Number of wires	min. 4 x 1,5 mm ²
Supply units	Rechargeable batte- ry and converter

Mounting

- Undo the screws on the cover and open the housing.
- Depending on the requirements, open the partially stamped opening and make them into the partially stamped internal diameter of 20.5 mm.
- Use the included entry bushes.
- Route the mains and connecting cables through the entry bushes and mount the supply unit in the provided internal area onto the wall.
- Connect the power lines to terminals L and N and the earth conductor to the screw clamp connector for earth.
- Connect the four wires of the connecting cable (to be installed by the customer) to terminal connections 1-4 and ensure that the wires are connected to the same connections in the luminaire.
- Put the cover back on and close the housing.

Continue as described in the installation instructions of the luminaire.